

CONTENTS

DIMENSION & SPECIFICATION	1
INTRODUCTION	2
BEFORE USING THE SCALE	3
EXPLANATION OF DISPLAY - General Version	4
KEYBOARD FUNCTIONS - General Version	4
EXPLANATION OF DISPLAY - North America Version	5
KEYBOARD FUNCTIONS - North America Version	5
POWER SUPPLY	6

【 DIMENSION & SPECIFICATION 】

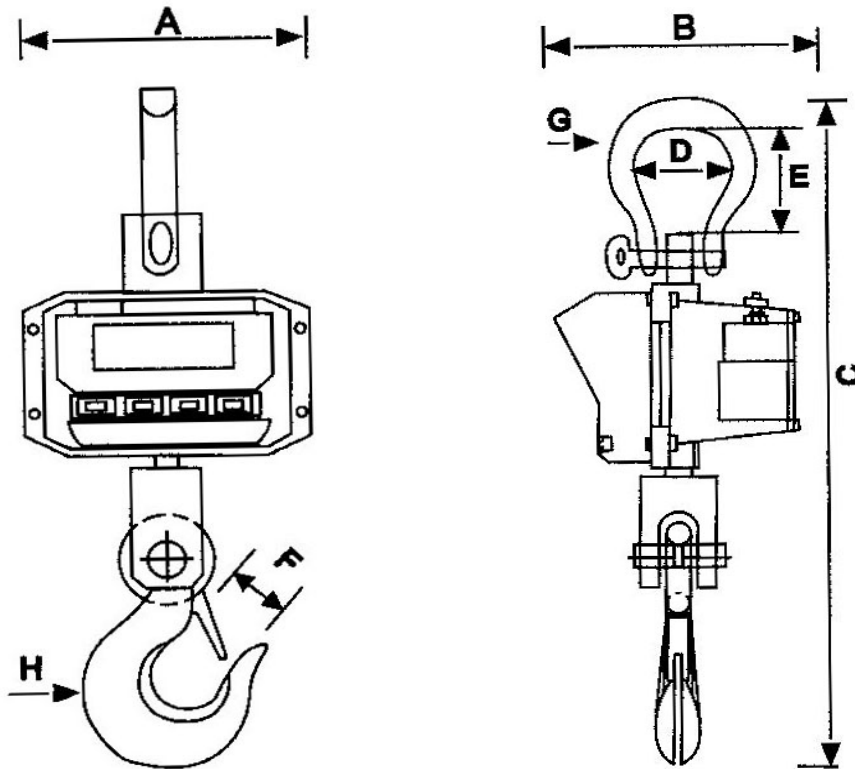

Unit : mm

MODEL	JLT-600	JLT-1T	JLT-2T	JLT-3T	JLT-5T	JLT-7.5T	JLT-10T
A	270	270	270	270	270	270	270
B	190	190	190	190	220	270	270
C	490	520	520	520	660	780	830
D	73	73	73	73	82	82	92
E	70	70	70	70	87	87	95
F	38	38	50	50	60	60	70
G	6.5t	6.5t	6.5t	6.5t	12t	12t	17t
H	3t	3t	4.5t	4.5t	7t	11t	16t
N.W (kg)	12.0	12.2	12.5	12.5	21.0	26.3	35.0

■ General Version

CAPACITY	DIVISION
600 kg	0.1 kg / 0.2 kg
1000 kg	0.2 kg / 0.5 kg
2000 kg	0.5 kg / 1 kg
3000 kg	0.5 kg / 1 kg
5000 kg	1 kg / 2 kg
7500 kg	2 kg / 5 kg
10000 kg	2 kg / 5 kg

■ North America Version

CAPACITY	DIVISION
1200 lb	0.5 lb
2500 lb	1 lb
5000 lb	2 lb
7000 lb	2 lb
11000 lb	5 lb
16000 lb	10 lb
22000 lb	10 lb

【 INTRODUCTION 】

Main Features


- Easy Operation & Rugged construction.
- 1.0" or 1.2" Super big & bright red LED display with wide view angle.
- 360-degree rotary safety hanger design, easy to use.
- Special designed in load cell, overload safety up to 200% .
- One battery charge can last for approximately 150 hours.
- Protection circle for charging in order to extend the battery life.
- Aluminum die-casting housing with keys are protected by anti-bumping metal protection.
- Two divisions can be selected. This feature is not for North America Version

 
【 BEFORE USING THE SCALE 】

First of all, we wish to thank you for purchasing a precision scale. To enable you to use this scale correctly, we suggest that you read these instructions carefully.

1. It must be prevented from getting wet. If it gets wet, please wipe it dry with a cloth. If there is something wrong with the machine, please contact your supplier.
 2. Keep it away from high temperatures and damp conditions.
 3. It must not be bumped against other items or overloaded with excessively heavy weights. (The load must not exceed the maximum capacity of the scale.)
 4. The best way to prolong the life of the scale, if the machine is not used frequently, is to clean it carefully and store it in a Styrofoam bag.
- ※ It could be dangerous by using improper battery or wrong connection of battery.

【 EXPLANATION OF DISPLAY - General Version 】

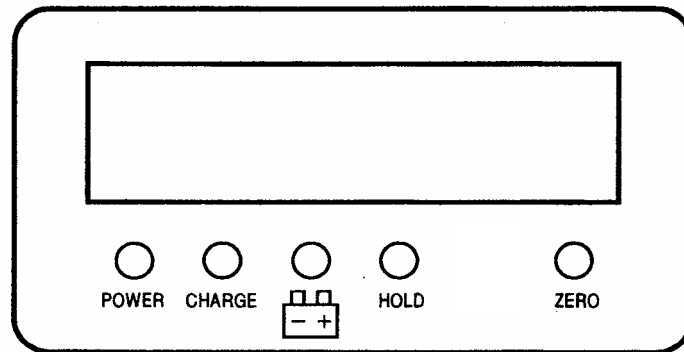


 
- ZERO : Scale is at ZERO
- HOLD : HOLD mode
-  : Low battery
- CHARGE : Charging mode
- POWER : Power on mode

【 KEYBOARD FUNCTIONS - General Version 】

- **ON / OFF** : Power on and off
- **CHANGE** : Press “CHANGE” key to switch the divisions
- **HOLD** : Press the “HOLD” key, it could keep the weight of the current weighing and there is a LED indication light on the bottom of the display.
Press the HOLD key again, to cancel HOLD function.
- **ZERO** : Press the “ZERO” key, the display will come back to zero.

【 EXPLANATION OF DISPLAY - North America Version 】

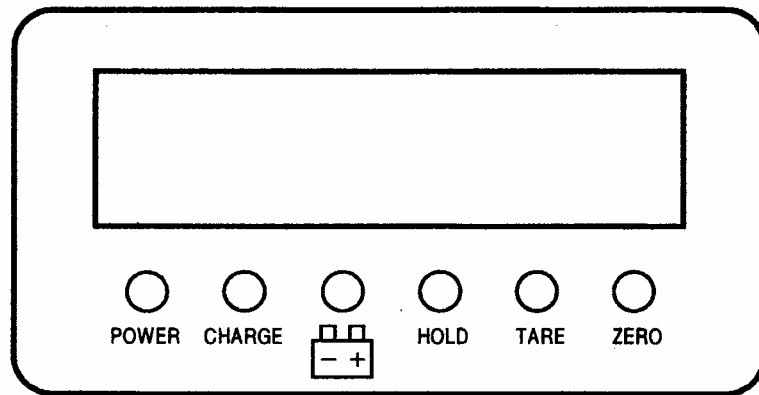

- ZERO : Scale is at ZERO
- TARE : TARE mode
- HOLD : No function
-  : Low battery
- CHARGE : Charging mode
- POWER : Power on mode

 
【 KEYBOARD FUNCTIONS - North America Version 】

- ON / OFF : Power on and off
- MODE : Select kg / lb
- TARE : Subtract the weight of hook or container
- ZERO : Press the “ZERO” key, the display will come back to zero.

【 POWER SUPPLY 】

Warning : Low Battery

The battery voltage is 6V / 10 AH. When the battery is low the following indication will light up.

- If  light in this indicator, means that battery power is low. This means that it is time for recharging the battery. If you continue using the battery without charging, it could last for approx. 10 hours before the battery goes dead.
- If the display goes/-turns off after you power on the scale; means that you need to recharge the battery right away.
- When charging, the indicator of charge will light up.

How To Charge the Battery

- The crane scale could be used continuously for 150 hours without recharging. But to prolong the life of the battery we recommend that the battery be charged for every 48 hours of use.
- When re-charging it, follow the specification of the recharge device for proper use.
- Please turn of the power while re-charging. In the meantime, the charging red light will be on. When the light changes to green, means that the battery is totally charged.

Alternative Power supplies

- 12V / 1A via main adaptor
- DC 6V /10AH internal rechargeable battery

Power Consumption

- DC 70mA