


WeiMonitor

"WEIMONITOR": SOFTWARE FOR MANAGING THE WEIGHS FOR DINI ARGEO SCALES

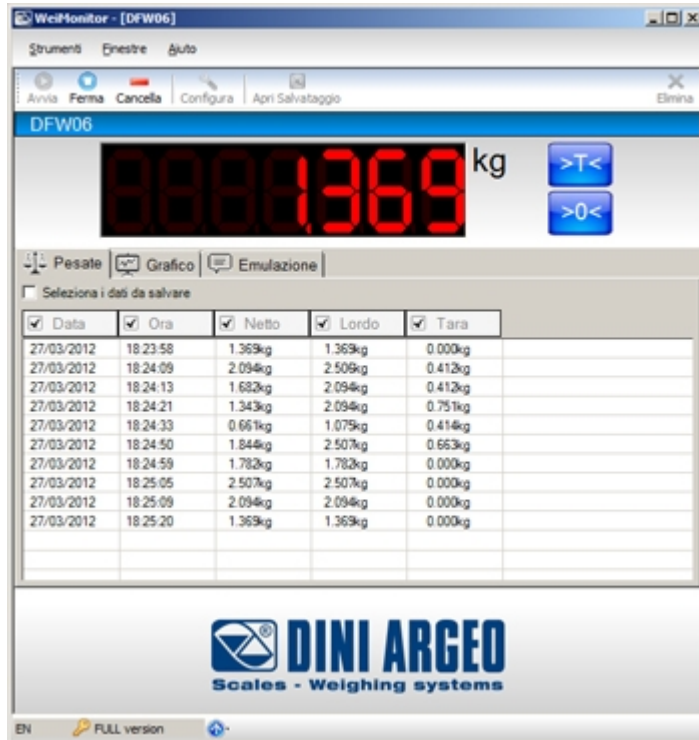

WeiMonitor is the PC program which allows you to monitor and record in real time all the weighings made on the connected scale, storing them in a text or Excel file for further processing.

Working in cooperation with:

VETEK AB

HANTVERKSVÄGEN 15 - 76493 - VÄDDÖ - SWEDEN
 Tel. +46176-208920, info@vetek.com, www.vetek.com

The best solution
 for advanced industrial
 applications

THE STRONG POINTS

- Easy to configure
- Versatility: WeiMonitor can be used with all DFW, DGT, 3590E, and CPWE instruments, as well as crane scales, pallet truck scales, weighing forks etc.
- Interactivity: WeiMonitor alerts the user directly on the scale if the data was recorded or not, allowing the use of the scale far away from the PC.
- Customization: it is possible to customize the program by inserting your logo and translate the user interface directly in own language (.ini file).
- Management of the main communication modes: RS232, USB, Ethernet-Wifi (TCP-IP).

MAIN FUNCTIONS

- Display of the weight, with the possibility to manage the semiautomatic tare through dedicated key.
- Manual recording by pressing a key of your choice on the PC or directly on the scale.
- Automatic recording in a determined amount of time, with programmable reading frequency.
- Storing of the data in a text (.txt) or Excel (.xls) file.
- Keyboard emulation, to enter the data directly in the opened Windows application, allowing the filling of notes, documents, invoices, etc.
- Approved functioning with recording of the ID weight (it requires the alibi memory inside the indicator).

PC MINIMUM REQUIREMENTS

- Pentium IV or equivalent - 256 Mb Ram
- 200 MB of empty space on disk
- Windows XP or further versions.
- Internet Explorer 6.0 SP1 or greater
- Monitor with 800x600 minimum resolution, 256 colours



To quickly complete the registration of WeiMonitor, it is necessary a temporary connection to the Internet.

UPON REQUEST

- License for using one Dini Argeo scale on more PC.
- License for managing more Dini Argeo scale.

DETAIL 1

ScaleMaster 401 (Administration) 2.4014

Start Stop Clear Configure Open Scale

Wrights (Graph)

Edit Header Columns

Date	Time	Article	Container	Container	Gross	Net	Tare	Unit	Article ID
26-12-2012	16:24:25	APPLES	SM70xLT0	PET08	5,515	5,260	0,255	kg	0_49
26-12-2012	16:24:43	APPLES	SM70xLT0	PET08	10,245	10,760	0,515	kg	0_50
26-12-2012	16:25:31	ORANGES	SM70xLT0	ADH	10,245	10,760	0,515	kg	0_51
26-12-2012	16:27:27	PEACHES	SM70xLT0	ADH	3,615	10,115	0,500	kg	0_52
26-12-2012	16:28:01	ORANGES	SM70xLT0	ALD	4,615	5,115	0,500	kg	0_53

DINI AR GEO
Scales - Weighing systems

Status: Full version OK connection OK





www.diniargeo.com



“YOUR WORLDWIDE PARTNER FOR WEIGHING,”

DINI ARGEO
FRANCE sarl
Nogent-sur-Marne

DINI ARGEO
GMBH
Sinsheim - Germany

DINI ARGEO
UK Ltd
Taunton - United Kingdom

DINI ARGEO WEIGHING
INSTRUMENTS Ltd
Shanghai - China

DINI ARGEO
WEIGHBRIDGES
Calto (RO) – Italy



HEAD OFFICE
Via Della Fisica, 20
41042 Spezzano di Fiorano Modena - Italy



VETEK AB

HANTVERKSVÄGEN 15 - 76493 - VÄDDÖ - SWEDEN

Tel. +46176-208920, info@vetek.com, www.vetek.com

SALES AND TECHNICAL ASSISTANCE SERVICE