

WTC/R BENCH SCALES 3-150 KG. OIML


Bench scales series /R are designed for direct trading (shops, restaurants, post offices). They have 290 x 360 mm and 400x500 mm weighing platform and capacities up to 150 kg.

Scales are equipped with reading unit PUE C/31 with backlit LCD display. Stabilization time is approximately 2 seconds. Non verified scales, also have function of locking the result of measurement and measuring in Newton's. Standard equipment of this series is RS 232 output.

ADDITIONAL EQUIPMENT

- "Pomiar Win" computer software
- "RadKey" computer software
- Computer software "Recipes"
- Computer software for maintenance of counting scales
- "Kafka" thermal printer
- "Epson" needle printer
- Suitcase for balance
- Large LED display
- Power loop output AP2

DRAWINGS

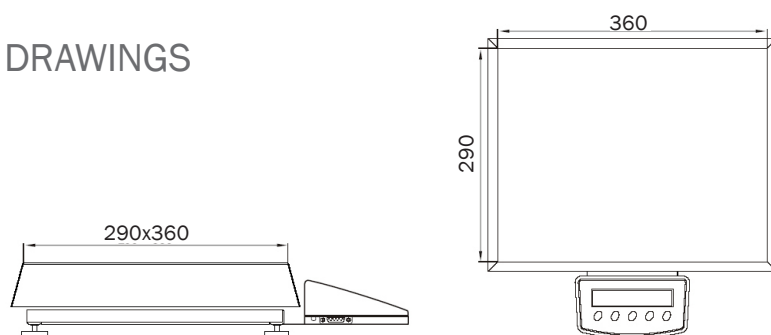

TECHNICAL DATA

	WTC/R 3C1	WTC/R 6C1	WTC/R 15C1	WTC/R 30C1	WTC/R 30C2	WTC/R 60C2	WTC/R 150C2
Max capacity:	3 kg	6 kg	15 kg	30 kg	30 kg	60 kg	150 kg
Readability:	1 g	2 g	5 g	10g	10 g	20 g	50 g
Tare range:	-3 kg	-6 kg	-15 kg	-30 kg	-30 kg	-60 kg	-150 kg
Pan size:	290x360 mm 400x500 mm				400x500 mm		
Working temp.:	-100 - +40 °C						
Output signal:	RS 232						
Power Supply:	230V AC, 50Hz / IIV AC and 6xM NiMH						
Display:	LCD (backlit)						
Mass:	7,4 kg	7,4 kg	7,4 kg	7,4 kg	15,9 kg	15,9 kg	15,9 kg