

RCA

"RCA" SERIES COLUMN LOAD CELLS



Analogue version of compression load cells, 4000 divisions, ideal for CE-M approved weighbridges, tanks, silos, etc. STAINLESS STEEL execution, with IP68 protection, fitted with "anti rat" shielded cable.

CAPACITIES (kg): 30000.

Stainless steel. IP68 protection. C4 precision class.

Working in cooperation with:

Vetek AB

Hantverksvägen 15 - 76493 Väddö, Sweden Tel +46176208920 info@yetek.com The best solution for advanced industrial applications

MAIN FEATURES

- C4 PRECISION CLASS.
- MADE IN STAINLESS STEEL.
- IP68 PROTECTION.
- 30.000 kg CAPACITY.
- "ANTI RAT" 20 m SHIELDED CABLE.
- TEST CERTIFICATE AVAILABLE UPON REQUEST.

TECHNICAL FEATURES

• Full Scale Output: 2mV/V +/- 0,1%

• Combined error of Full Scale Output: ± 0,017%

• Operating temperature range: -20°C/+60°C

Input resistance: 815 ± 20 Ohm
Output resistance: 700 ± 5 Ohm

Safe overload: 150% F.S.4-pole armoured cable.

ATEX Version

• The CCATEX certificate makes the load cell suitable for use in hazardous areas with protection methods according to:

ATEX II 1G Ex ia IIC T6 (Ta $-20 \div +40$ °C) TX (Ta $-20 \div +65$ °C) Ga


ATEX II 1D Ex ta IIIC TX°C (Ta -20÷+40°C) TX°C (Ta -20÷+65°C) Da IP65.


The certificate includes the manual and the ATEX CE conformity declaration (available in EN, DE, FR, and IT).

• IMPORTANT: the certificate refers to the single load cell. For systems with more load cells, it is necessary to order one certificate for each load cell.

<u>Wiring Code</u>	
<u>Colour</u>	<u>Function</u>
WHITE	OUTPUT +
RED	INPUT +
YELLOW	OUTPUT -
BLUE	INPUT -

DETAIL 1

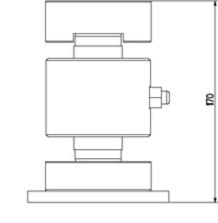

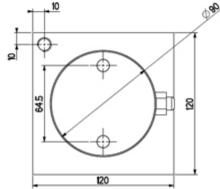

VERSIONS

Available Versions	
	Max
Code	(kg)
RCA30C4	30000





DINI ARGEO FRANCE sarl Nogent-sur-Marne DINI ARGEO **GMBH** Sinsheim - Germany

UK Ltd Taunton - United Kingdom

DINI ARGEO

DINI ARGEO WEIGHING INSTRUMENTS Ltd Shanghai - China

DINI ARGEO WEIGHBRIDGES Calto (RO) - Italy



HEAD OFFICE Via Della Fisica, 20 41042 Spezzano di Fiorano Modena - Italy







Vetek AB

Hantverksvägen 15 - 76493 Väddö, Sweden Tel + 46176208920 info@vetek.com

SALES AND TECHNICAL ASSISTANCE SERVICE