

ETHERCAT1S

ETHERCAT interface for single weighing scale or weighing scales network



The ETHERCAT <u>interface</u> allows the communication among 16 different digital weighing scales at the same time, reducing the costs and the complexity of the weighing system.

Working in cooperation with:

VETEK AB

HANTVERKSVÄGEN 15 - 76493 - VÄDDÖ - SWEDEN Tel. +46176-208920, info@vetek.com, www.vetek.com

The best solution for advanced industrial applications

ETHERCAT HUB FUNCTION UP TO 16 WEIGHING SCALES

- This configuration makes possible to view, at the same time, the weighing scales network data by ETHERCAT protocol. In detail:
 - NET weight and GROSS weight of the scales
 - Weight status (for example, positive, negative, stable, unstable)
 - Error condition (e.g. overload, underload)
 - DIGITAL INPUT status
 - RELAY OUTPUT status

ETHERCAT CONVERTER FOR SINGLE WEIGHING SCALE

- It is possible to connect the ETHERCAT to a single scale, or to a single scale of a network. By this interface, the following data can be read:
 - NET, GROSS and TARE weight
 - Weight status (for example; positive, negative, stable, unstable)
 - SETPOINT output writings
 - DIGITAL INPUT status
 - RELAY OUTPUT status
 - Error conditions (i.e. overload, underload)
 - SETPOINT output writings
 - Aliby Memory
 - Calibration
 - Configuration SETUP

ETHERCAT FOR WEIGHING SCALES: MAIN FEATURES


- ETHERCAT slave port.
- ABS case for panel mounting on DIN bar.
- Suitable to work with <u>DGT1S</u> weight transmitter. Quick configuration from the transmitter programming menu.
- Serial port RS485 (from 9600 to 115200 baud), with "quick connect" system for a fast connection.
- Power source: 12-24Vdc.






The Quick Connect system makes the connection between ETHERCAT and DGT1S weight transmitter fast and simple.

DETAIL 3

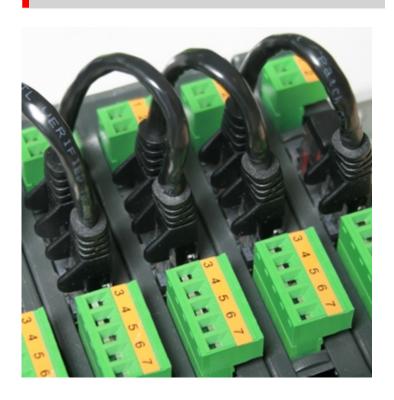

DETAIL 4

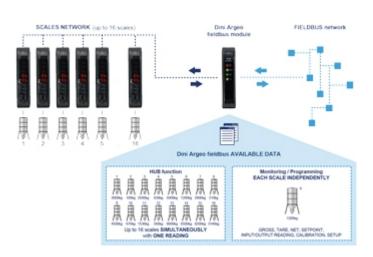

ETHERCAT FOR DIGITAL WEIGHING SCALES: CONFIGURATIONS (Please click on the image to enlarge)





DINI ARGEO FRANCE sarl Nogent-sur-Marne DINI ARGEO GMBH Sinsheim - Germany **DINI ARGEO UK Ltd**Taunton - United Kingdom

DINI ARGEO WEIGHING INSTRUMENTS Ltd Shanghai - China DINI ARGEO WEIGHBRIDGES Calto (RO) – Italy



HEAD OFFICEVia Della Fisica, 20
41042 Spezzano di Fiorano Modena - Italy







VETEK AB

HANTVERKSVÄGEN 15 - 76493 - VÄDDÖ - SWEDEN

Tel. +46176-208920, info@vetek.com, www.vetek.com

SALES AND TECHNICAL ASSISTANCE SERVICE