# CL5200 SERIES | Anyshop Scale

#### **SPECIFICATIONS**

| Model                 | CL5200                                                                 |      |       |
|-----------------------|------------------------------------------------------------------------|------|-------|
| Max.capacity(kg)      | 3/6                                                                    | 6/15 | 15/30 |
| Readability(g)        | 1/2                                                                    | 2/5  | 5/10  |
| External resolution   | 1/3,000 (dual interval)                                                |      |       |
| Display type          | Graphic LCD(208 x 48)                                                  |      |       |
| Printing speed        | Max. 100 mm/sec                                                        |      |       |
| Printer resolution    | 202 dpi                                                                |      |       |
| Label size (mm)       | Width:40~60, Length:30~120                                             |      |       |
| Power                 | AC 100~240 V, 50/60 Hz                                                 |      |       |
| Operating temperature | -10°C ~ +40°C                                                          |      |       |
| Platter size (mm)     | B,P Type:380(W) x 250(D)                                               |      |       |
| Dimensions (mm)       | B Type: 409(W) × 441(D) × 180(H)<br>P Type: 410(W) × 500(D) × 535.8(H) |      |       |
| Product weight(kg)    | B Type:6.95, P Type:7.65                                               |      |       |


#### **FEATURES**

- Memory capacity: 10,000 PLUs & 1,000 ingredients
- Supporting free label format design
- Cartridge-loading-type label installation
- 45 fixed format & 20 customized format design
- Various interface
- Combined wide LCD display

#### **OPTION**

- Wireless bridge card
- PC manager program(CL-Works)
- Platter with back rail

#### **DIMENSIONS**

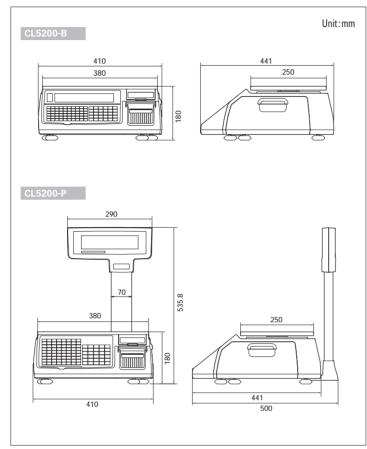



CAS BLDG., # 440-1, SUNGNAE-DONG, GANGDONG-GU, SEOUL, KOREA

TEL\_ 82 2 2225 3500 FAX\_ 82 2 475 4668

http://www.globalcas.com

Specifications are subject to change for improvement without prior notice.



#### C-72802102







Large LCD display

Easy loading Paper Cartridge

& function keys

# CL5200 SERIES

# It's a must-have scale for your shop!!

- Flexible & reliable network system (wired/wireless)
- Easy loading paper cartridge
- Free format label design
- User friendly PC software







# CL5200 SERIES



# TOTAL WEIGHING SOLUTION TM

#### Hardware

#### Steady PLU keys

The embossing membrane keypad adds a steady look of CL5200-P and CL5200-B.

Double-click function provides easy access to the kev's secondary PLU, totaling in double of PLU key



#### Large display

Large full graphic LCD display is suitable for any environment. (208 x 48 dot graphic LCD).

- Tare / Weigh / Unit / Price : 4/5/6/6 digits



#### High speed printer

High speed thermal printer supports label/ticket printing. Guaranteed satisfaction with 100mm/s speed and 202dpi resolution.



#### Paper cartridge

Cartridge loading type supports quick and easy replacement of new label roll.

- Various paper support
- Auto measuring system



#### Various interface connetions

It supports RS-232c, PS/2, Cash drawer, wired/wireless Ethernet, and USB Device.



#### Menu system

No need to scroll through menus for programming settings. Unique 4 digit 'Menu Code' entry pin helps pinpoint the desired program field. ex) Menu code '1120' is for editing PLU name.

## **PRODUCT LINE UP**

- CL5200 is compatible with all CAS label printing scales in the same network
- Combined wide LCD looks better





### CL5500 LINE UP









► CL5500-H




# **Anyshop** Scale

### Software

#### **Label Formats**

There are 45 preset labels installed in the scale and additional 20 formats can be modified freely with CL-Works PC program.

- Continuous label/ticket
- Up to 120mm label length





#### Barcode

Almost every conventional 1-Dimensional barcode types are available.


- UPC, EAN13, EAN13A5, I20F5, CODE128, CODE39, CODE93. CODABAR, IATA20F5





## **Network System**

- TCP/IP communication protocol
- IEEE802.11g specification wireless network
- One to one & multi to multi & wired/wireless network
- Network structure for
- Pre-pack and self-service counter
- Hyper market

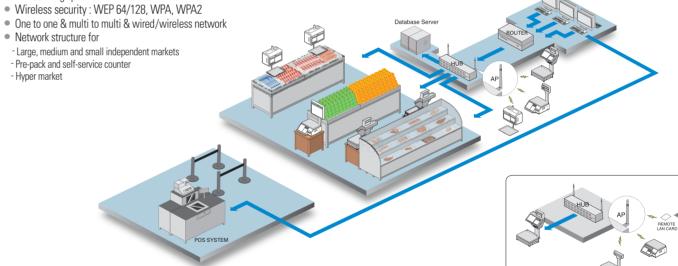

## PC software: CL-Works

CL5200 supports PLU programming, store data, sales report, label editor and much more. You can control all the program data by CL-Works. CL5000, CL5000J and CL5500 share this software with CL5200.

▲ Mixed with Wired / Wireless Network

CL-Work



#### **PLU Editor**

- Enable easy control, of PLU
- Allows PLUs management by excel



#### **Label Editor**

- 20 modifiable label formats
- Easy downloading of label formats



Multi to Multi

#### **Keypad Editor**

- Easy to setup and download
- Key design color image Keypad supported