

EP2GD

Stainless steel scales "Easy Pesa 2GD" series, for ATEX 1, 21, 2, 22 zones



Fully stainless steel bench scales, for specific use in <u>ATEX</u> hazardous areas. Powered by a long lasting rechargeable battery which allows an easier installation directly where it's needed. These scales don't need a power supply socket in dangerous zone nor ATEX proof power supply cables. Provided with the ATEX declaration of conformity. Ex II 2GD IIC T4 T197°C X protection.

Working in cooperation with:

Vetek AB

Hantverksvägen 15 - 76493 Väddö - Sweden Tel +46-176208920 info@vetek.com The best solution for advanced industrial applications

PLATFORM FEATURES

Approved "single point" STAINLESS STEEL load cell according to OIML R60 standards with protection against dust and water splashes
according to IP67 standards.

ATEX approved load cell with ATEX protection:

ATEX II 1G Ex ia IIC T6 (Ta $-20 \div +40$ °C) TX (Ta $-20 \div +65$ °C) Ga.

ATEX II 1D Ex ta IIIC TX°C (Ta -20÷+40°C) TX°C (Ta -20÷+65°C) Da IP65.

- Structure, enclosure and loading plate made in AISI304 stainless steel.
- Adjustable levelling feet with plastic over shoe.
- Supplied with support column, height:
 - 500 mm in the "Q" models;
 - 700 mm in the "X" models.

WEIGHT INDICATOR FEATURES

• IP68 Weight indicator for ATEX zones with protection methods according to:

ATEX II 2(2)G Ex ib [ib Gb] IIC T4 Gb for gases.

ATEX II 2(2)D Ex tb [ib Db] IIIC T197°C IP65 Db for dust.

- EC-Type-Examination certificate according to Annex III (94/9/EC directive). CE-M approvable (OIML R-76 / EN 45501).
- Waterproof 17-key numerical and functional keyboard.
- LCD display with 6 25-mm high contrast digits, clearly visible even in poor lighting conditions and with low temperatures, and with 6 LEDs for showing the active functions.
- Up to 10.000e or multirange 3 x 3000e @ 0,3 μV/d in CE-M approved version for legal for trade use.
- Up to 1.000.000 displayable divisions with internal resolution up to 3.000.000 points.
- A/D 24-bit sigma-delta conversion, up to 100 conv./sec. autoselect.
- Power supply through external battery pack with 160h operating time. An extra battery pack for continuous use (24/7) is available as
 option.
- Charger included in the supply.

SCALE FUNCTIONS


- SCALE FUNCTIONS
- Zeroing
- Automatic tare
- · Presettable tare
- · Selectable function command
- On/off switching.

SELECTABLE FUNCTIONING MODE

- High Resolution Weighing x 10
- Net/Gross or lb/kg conversion
- Weight totalization
- Formula weighing
- +/- Checkweighing
- Counting (Max. resolution of 1.500.000 divisions)

DETAIL 1

DETAIL 2

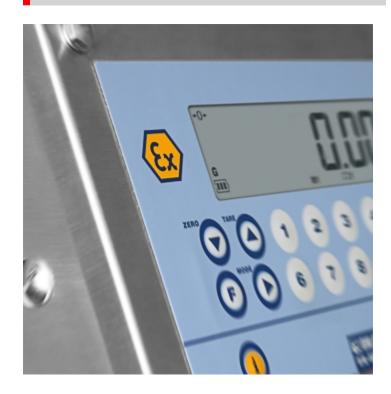



DETAIL 3



VERSIONS

Versioni disponibili						
	Piatto	Max	d	M	M	d HR
Codice	Max (mm)	(kg)	(g)	(g)*	2R (g)*	(g)*
EPQI2GD15B	400x400	15	2	5	2/5	1
EPQ12GD30B	400x400	30	5	10	5/10	2
EPQ12GD60B	400x400	60	10	20	10/20	5
EPQI2GD150B	400x400	150	20	50	20/50	10
EPXI2GD60B	600x600	60	10	20	10/20	5
EPXI2GD150B	600x600	150	20	50	20/50	10
EPXI2GD300B	600x600	300	50	100	50/100	20





DINI ARGEO FRANCE sarl Nogent-sur-Marne DINI ARGEO **GMBH** Sinsheim - Germany DINI ARGEO UK Ltd

Taunton - United Kingdom

DINI ARGEO WEIGHING INSTRUMENTS Ltd Shanghai - China

DINI ARGEO WEIGHBRIDGES Calto (RO) - Italy



HEAD OFFICE Via Della Fisica, 20 41042 Spezzano di Fiorano Modena - Italy









Hantverksvägen 15 - 76493 Väddö - Sweden Tel. 0046-176208920 info@vetek.com

SALES AND TECHNICAL ASSISTANCE SERVICE