



Ranger® Count 4000

Counting Scale



The Best Value for Durable Industrial Counting

Ranger Count 4000 is the ideal tool for tough industrial counting jobs that require durability and accuracy at a great value. Portable with die-cast metal housing and a rechargeable battery, this scale is equipped with weighing, parts counting, check counting, and accumulation functions, and can produce results for a variety of industrial weighing, counting, and measurement needs.

Standard Features Include:

- **Full Metal Housing Offers Strength and Protection and Maximizes Product Life**—Sturdy metal housing and slip-resistant rubber feet provide protection and stability necessary for tough industrial weighing while extending the scale's usable life.
- **Precise Counting and Weighing Performance Produce Undoubtedly Accurate Results**—Accurate weighing and counting performance is assured through Ranger Count 4000's 1:1,500,000 internal counting resolution and auto-optimization software that reduces errors and ensures accuracy.
- **User-Friendly Software Makes Ranger 4000 Very Easy to Operate**—The combination of SmarText™ software, a centrally located count display and dedicated Sample & Tare keys make Ranger Count 4000 very easy to operate.
- **Several Connectivity Options Provide Connection to Multiple Peripheral Devices**—Ranger Count 4000 offers the highest level of connectivity in its class through its Standard RS232 with optional Ethernet, second RS232, or USB interface.

Ranger® Count 4000 Counting Scale

Metal Housing Ensures Protection

With die-cast sealed metal housing and slip-resistant rubber feet, Ranger Count 4000 was built to maximize product life and withstand heavy duty use and ensure accurate operation in industrial environments.

Precise Counting and Weighing Performance

The high resolution Ranger Count 4000 has a 1:30,000 display resolution and 1:1,500,000 internal counting resolution. It also features advanced auto-optimization software which recalculates the average piece weight as the overall weight increases, ensuring accuracy and minimizing counting errors.

Ranger Count 4000 also offers a 30 item library data storage function that can store 12-digit part numbers, average piece weights, checkcounting or checkweighing parameters, tare weights and accumulated counts or weights for quick and simple retrieval of frequently used data.

Intuitive Software Supports Simple Navigation


The inviting display and navigation make Ranger Count 4000 extremely simple to use. The three-window backlit LCD display includes a centrally-located count display as well as weight and piece weight displays. Eight function keys, including dedicated Sample and Tare keys, and full numeric keypad make setup and input operations simple and straightforward.

More Connectivity Options

Ranger Count 4000 can be integrated into systems and connected to multiple peripheral devices through its standard RS232 with optional Ethernet, second RS232, or USB. Ranger Count 4000 can also support two-scale counting through the optional 2nd platform to support weighing jobs that require a higher capacity platform or additional platform space. Whether your data transfer requirements are simple or complex, Ranger Count 4000 offers the necessary functionality to meet your needs.

Application Modes

- **Weighing**—Determine the weight of items in the selected unit of measure.
- **Parts Counting**—Count samples of uniform weight.
- **Check Weighing/Counting**—Compare the weight/count of a sample against target limits.
- **Accumulation**—Totalization of weight and count. Calculates total accumulated weight and count of separate items.

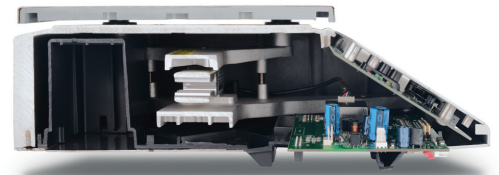

Rapid Stabilization

Ranger Count 4000 produces accurate results within one second. The rapid stabilization virtually eliminates your wait time and allows you to move at a pace determined by you and not your weighing equipment. Work efficiently and with confidence that your results are accurate. Maximize your throughput without sacrificing accuracy with the Ranger Count 4000.


Internal Power Supply and Rechargeable Battery

Say goodbye to being restricted to working only near power outlets! Ranger Count 4000 is equipped with a rechargeable lead acid battery that can provide power for more than 210 hours! It can also be powered through the easy connect power cord that takes up minimal space and automatically adapts to different power line voltages and frequencies, eliminating disruptions in workflow due to power outages and shortages.

Metrology

The Ranger Count 4000 meets the Class III requirements of OIML R76 and EN 45501.

Outline Dimensions

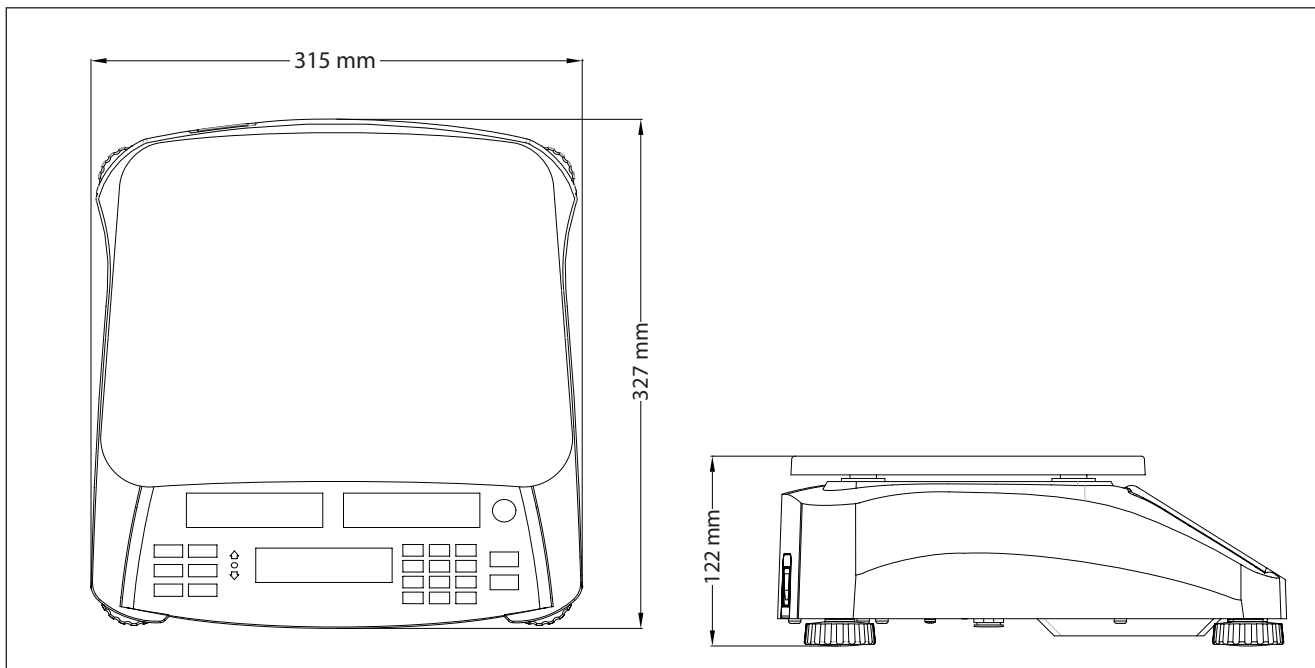

Ranger® Count 4000 Counting Scale

Models	RC41M3	RC41M6	RC41M15	RC41M30
Capacity × Readability	3 × 0.0001 kg 3000 × 0.1 g	6 × 0.0002 kg 6000 × 0.2 g	15 × 0.0005 kg 15000 × 0.5 g	30 × 0.001 kg 30000 × 1 g
Maximum Displayed Resolution	1:30000	1:30000	1:30000	1:30000
Models	RC41M3-M	RC41M6-M	RC41M15-M	RC41M30-M
Certified Capacity × Readability	3 × 0.001 kg 3000 × 1 g	6 × 0.002 kg 6000 × 2 g	15 × 0.005 kg 15000 × 5g	30 × 0.01 kg 30000 × 10 g
Certified/Approval Resolution	1:3000	1:3000	1:3000	1:3000
Min. Recommended Sample Weight	2 g	4 g	10 g	20 g
Min. Recommended APW	0.01 g	0.02 g	0.05 g	0.1 g
Max. Internal Counting Resolution	1:1,500,000			
Construction	Stainless Steel pan, Die cast aluminum housing			
Weighing Units	kg, g, lb, oz, lb:oz			
Application Modes	Weighing, Parts Counting, Checkweighing, Checkcounting, Accumulation			
Display	3-Window, 1 inch / 26mm high LCD display with white backlight, 6-digit, 7-segment			
Checkweighing Indicators	3 LED (yellow, green, red) with configurable operation and alert beeper			
Memory	30 item library			
Keyboard	8 function, 12 numeric mechanical keys			
Zero Range	4% or 20% of full scale capacity			
Tare Range	Full capacity by subtraction			
Stabilization Time	1 second			
Auto-Zero Tracking	Off, 0.5, 1 or 3 divisions			
Safe Overload Capacity	150% of capacity			
Power	100-240 VAC / 50-60 Hz internal universal power supply, internal rechargeable lead acid battery			
Battery Life	210 hours continuous use with 12 hour recharge time			
Calibration	External, with user-selectable calibration weight			
Interface	Built-in RS232, optional 2 nd platform, 2 nd RS232, USB, Ethernet			
Operating Temperature Range	-10 °C to 40 °C			
Pan Size (W × L)	300 mm × 225 mm			
Scale Dimensions (W × L × H)	315 × 327 × 122 mm			
Shipping Dimensions (W × L × H)	397 × 447 × 195 mm			
Net Weight	5.9 kg			
Shipping Weight	7.2 kg			

Other Standard Features and Equipment

Stainless steel platform, sealed front panel, menu lockswitch, up front level indicator, adjustable leveling feet, selectable environmental and auto-print settings, stability indicator, overload and underload indicators, low battery indicator, auto shut-off, auto tare

Compliance

- **Metrology:** EN 45501 (T8252); OIML R76 (R76/2006-NL1-15.21)
- **Product Safety:** IEC/EN 60950-1
- **Electromagnetic Compatibility:** IEC/EN 61326-1
- **Other:** WEEE/ROHS

Accessories

2 nd Platform, Kit	30037446
Ethernet, Kit	30037447
Second RS232 Kit	30037448
USB Kit	30037449
In Use Cover	30240697
SF40A Impact Printer with Cable	30064202
T4 Label Printer	30057588

OHAUS Europe GmbH
Im Langacher 44
8606 Greifensee
Switzerland

e-mail: ssc@ohaus.com
Tel: 0041 22 567 53 19
e-mail: tsc@ohaus.com
Tel: 0041 22 567 53 20

www.ohaus.com

OHAUS Corporation is an ISO
9001:2008 manufacturer

ISO 9001:2008
Registered Quality
Management System

CH16B059

