EPWL "LOGISTIC" PALLET-WEIGHING FLOOR SCALES SERIES




EPWL with optional column

NOTES: weight indicator is suitable for installation on the table, column, wall or attached to the structure.

DIMENSIONS mm

Values in mm

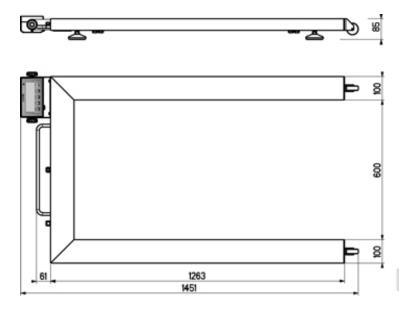



Datasheet EPWL V1

VETEK WEIGHING AB

Hantverksvägen 15, 76493 Väddö, Sweden. Tel +46176-208920, info@vetek.com, www.vetek.com Quick and accurate pallet weighing scales, easy to use and transport. Integrated extractable weight indicator complete of stretchable connection cable which may be easily positioned according to one's weighing requirements. Functions with a built-in battery with extractable drawer for easy substitution. The automatic multirange capacity allows the maximum accuracy on the lower weight values, mantaining the same load capacity. Available also in dual range APPROVED version, for legal for trade use.

MAIN FEATURES

Weight indicator with support bracket having an adjustable inclination, for use on the table, column, or wall.

LCD 25mm backlit display with 6 high contrast digits and icons for indication of active functions.

ABS IP54 case, easy to clean and resistant in harsh and corrosive environments.

Waterproof 5-key functional keypad.

Functions with 4 shear beam 1000 Ohm aluminium load cells approved according to OIML R60 C3 standards (3000+3000 divisions), IP67 protection degree, able to handle double the nominal load.

Carbon steel oven-fire painted bearing structure, complete of adjustable feet.

Level, wheels, and transport handle.

Connection cable to the indicator, 3 m long.

Accuracy: +/-0.05% of the capacity.

Programmable automatic switch-off.

Digital calibration and Set-Up from keypad or from PC through DINITOOLS.

Power supply from 5 to 12 Vdc

Standard fitted with extractable drawer for housing 4 AA batteries (not included), which may be rechargeable, and standard connector for connection to external power adapter (if connected, it excludes the battery power).

SELECTABLE AND KEYPAD FUNCTIONS

Clearing; automatic and manual tare, print.

X 10 High resolution visualisation.

Net/Gross or lb/kg conversion.

Accumulation.

Formula weighing.