


FLI

STAINLESS PLATFORM "FLOOR" FLI SERIES

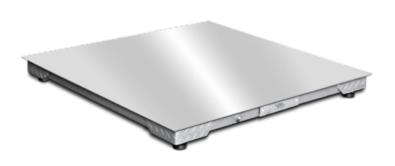

Double range STAINLESS steel platform, with approved STAINLESS load cells, suitable for weighing application in industry and any commercial environment. IP68 protection.

Working in cooperation with:

Vetek AB

Hantverksvägen 15 - 76040 - Väddö - SWEDEN Tel. +46176-208920, info@vetek.com, www.vetek.com The best solution for advanced industrial applications

TECHNICAL FEATURES

- Functioning with 4 STAINLESS steel shear-beam load cells (1000 ohm), OIML R60 C3 approved (3000 divisions), IP68 protection degree.
- Monobloc structure in STAINLESS steel, adjustable resting feet and level.
- Fixed STAINLESS steel load surface.
- Max. Power supply 15 Vdc.
- Hermetic junction box, with IP67 protection or IP68 (if integrated with the GELBOX option).
- 3m shielded cable for the connection with the indicator.
- IP68 Watertight connector.

OPTIONS

- Connection to the indicator and configuration/calibration at our office.
- Connection to the indicator and calibration with single scale 3000e or double scale 3.000 + 3.000e CE-M approval.
- Support column for the indicator.

VERSIONS

Versioni disponibili						
	lxwxh	N° celle	Max	d	M	M
Codice	(mm)		(kg)	(g)	(g)*	2R (g)*
FLBI1500	1250x1250x120	4x1000kg	600/1500	200/500	500	200/500
FLE13000	1500x1500x120	4x2000kg	1500/3000	500/1000	1000	500/1000





DINI ARGEO FRANCE sarl Nogent-sur-Marne DINI ARGEO GMBH

Sinsheim - Germany

DINI ARGEO UK Ltd

Taunton - United Kingdom

DINI ARGEO WEIGHING INSTRUMENTS Ltd

Shanghai - China

DINI ARGEO WEIGHBRIDGES

Calto (RO) - Italy



HEAD OFFICE Via Della Fisica, 20 41042 Spezzano di Fiorano Modena - Italy







Vetek AB

Hantverksvägen 15 - 76040 - Väddö - SWEDEN

Tel. +46176-208920, info@vetek.com, www.vetek.com

SALES AND TECHNICAL ASSISTANCE SERVICE