


### Features:

- High & low temperature accuracy and high stability
- Can be connected directly to 1 or 2 load cells or connected up to 8 x 350Ω load cells through a junction box
- Support multiple magnification range, two types of excitation voltage available
- Anti-EFT (Electrical Fast Transient pulses) interference & anti-radiation interference

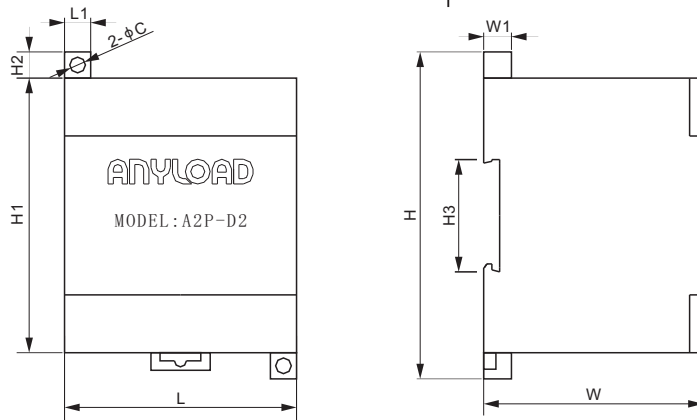

### DIMENSIONS

	C	H	H1	H2	H3	L	L1	W	W1
mm	4.8	100	84	8	35	71	8	67.2	8.5
inches	0.2	3.9	3.3	0.3	1.4	2.8	0.3	2.6	0.3

### SPECIFICATIONS

Load Cell Type		All strain gage type
Power Supply	V DC	24
Input Range	mV	0 ± 36
Output Signal	V	0 ± 10
	mA	4 - 20
Max. Power	W	4.35
Max. Input Offset Voltage	μV	50
Min. Common-mode Rejection Ratio (G=10)	dB	100
Operating temperature range	°C / °F	-10 - 50 / 14 - 122
Installation		Standard rail channel (Indoor)
Enclosure Material		PVC casting
Excitation voltage to load cell	V	5 or 12
Tare Limit		Shall not exceed 30% of full load

### PART NUMBER

Part No.	*Compatibility with IO-LINK of Balluff's	Weight (kg) Approx.
A2P-D2.....	No.....	0.2
A2P-D2B.....	Yes.....	0.2

\* compatible models of IO-Link of Balluff's:  
 - BNI IOL-709-000-K006  
 - BNI IOL-710-000-K006  
 - BNI IOL-712-000-K023  
 - BNI IOL-714-000-K023

### CONNECTION DIAGRAM

